Check valve type RE

Product documentation

Screw-in valve	
Operating pressure p _{max} :	500 bar
Flow rate Q _{max} :	120 lpm







D 7555 R 12-2018-1.2



© by HAWE Hydraulik SE.

The reproduction and distribution of this document as well as the use and communication of its contents to others without explicit authorisation is prohibited.

Offenders will be held liable for the payment of damages.

All rights reserved in the event of patent or utility model applications.

Brand names, product names and trademarks are not specifically indicated. In particular with regard to registered and protected names and trademarks, usage is subject to legal provisions.

HAWE Hydraulik respects these legal provisions in all cases.

Printing date / document generated on: 04.01.2019



Contents

1	Overview of check valves type RE	4
2	Available versions, main data	5
3	Parameters	6
4	Dimensions	
4.1	Creating the mounting hole	9
5	Assembly, operation and maintenance recommendations	.10
5.1	Intended use	. 10
5.2	Assembly information	. 10
5.2.1	Creating the mounting hole	.10
5.3	Operating instructions	11
5.4	Maintenance information	.11



1 Overview of check valves type RE

Check valves are a type of non-return valve. They block the oil flow in one direction and open in the opposite direction. In the closed state they have zero leakage.

The check valve type RE can be screwed in. Type RE is a plate valve without a spring.

Type RE is suitable for isolating pressurising loads or as a foot valve for a pump suctuion linde.

Features and benefits:

- Operating pressures max. up to 500 bar
- Easily machined mounting holes
- robust and dirt resistance

Intended applications:

- Mobile hydraulics
- Industrial hydraulics



Screw-in valve




2 Available versions, main data

Circuit symbol:

Section view:





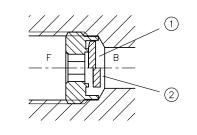

- 1 Closed position
- 2 Open position

Order coding example:



Table 1 Basic type and size

Basic type and size	Flow rate Q₽ (lpm)	Pressure p _{max} (bar)	Thread
RE O	12	500	G 1/8 A (BSPP)
RE 1	25	500	G 1/4 A (BSPP)
RE 2	40	500	G 3/8 A (BSPP)
RE 3	80	450	G 1/2 A (BSPP)
RE 30 RE 32	80	450	M20x1.5 M22x1.5
RE 4	120	400	G 3/4 A (BSPP)

Table 2 Versions

Model	Description	View	Circuit symbol
No designation	Screw-in valve		F O B
G	Pipe connection on both sides	F B	F B
F	Tapped journal on one side	B	B F

1 NOTE

Thread in accordance with DIN EN ISO 228-1, (-UNF) or JIS B 2351-1.




Parameters

General

3

Designation	Check valve						
Designation							
Design	Shim check valve, without spring						
Model	Screw-in valve, housing version						
Material	Steel; hardened, ground functional inner parts V2A						
Installation position	As desired						
	1 NOTE A short oil surge ensures the valve closes securely. This applies particularly in installation positions in which the plate does not fall onto the seat due to its inherent weight.						
Flow direction	$F \rightarrow B$ Free flow						
Hydraulic fluid	Hydraulic oil: according to part 1 to 3; ISO VG 10 to 68 according to DIN ISO 3448 Viscosity limits: min. approx. 4, max. approx. 1500 mm²/s opt. operation approx. 10 500 mm²/s. Also suitable for biologically degradable hydraulic fluids type HEPG (polyalkylene glycol) and HEES (synthetic ester) at operating temperatures up to approx. +70°C.						
cleanliness level	ISO 4406 21/18/1519/17/13						
Temperatures	Ambient: approx40 +80°C, Fluid: -25 +80°C, Note the viscosity range! Permissible temperature during start: -40°C (observe start-viscosity!), as long as the service temperature is at least 20K higher for the following operation. Biologically degradable pressure fluids: Observe manufacturer's specifications. By considera- tion of the compatibility with seal material not over +70°C.						

Characteristic curves

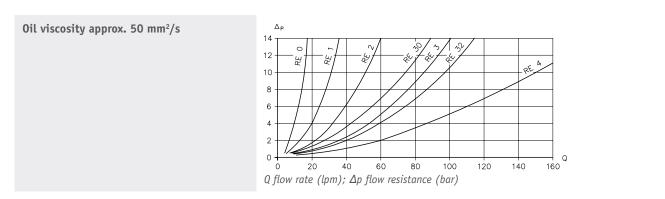



Weight

Screw-in valve	Туре	
	RE O	= 2 g
	RE 1	= 4 g
	RE 2	= 6 g
	RE 3, RE 30, RE 32	= 10 g
	RE 4	= 18 g
Housing version	Туре	
	RE 0 - G	= 30 g
	RE 1 - G	= 75 g
	RE 2 - G	= 105 g
	RE 3 G	= 160 g
	RE 4 - G	= 340 g
	RE 0 - F	= 30 g
	RE 1 - F	= 60 g
	RE 2 - F	= 85 g
	RE 3 F	= 140 g
	RE 4 - F	= 300 g



4 Dimensions

All dimensions in mm, subject to change.


5

1

L

Screw-in valve






Туре	G1	L	SW	Tightening torque \pm 20% (Nm)
RE O	G 1/8 A (BSPP)	5	4	10
RE 1	G 1/4 A (BSPP)	6	5	15
RE 2	G 3/8 A (BSPP)	7	8	20
RE 3	G 1/2 A (BSPP)	7.5	10	35
RE 30	M 20x1.5	7.5	10	35
RE 32	M 22x1.5	7.5	10	35
RE 4	G 3/4 A (BSPP)	9	12	40




Housing version

RE ... G

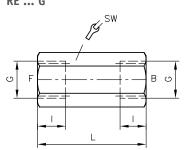

RE ... F

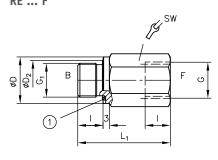


1 Fitting seal

For RE 1 F with fitting seal G 1/4 (BSPP) NBR, all others with cutting edge.

Туре	G	G1	ØD	ØD ₂	L	L_1	ι	SW	Tightening torque (Nm)
RE O	G 1/8 (BSPP)	G 1/8 A (BSPP)	14	12.5	30	28	8	14	20
RE 1	G 1/4 (BSPP)	G 1/4 A (BSPP)	19			43		19	40
RE 2	G 3/8 (BSPP)	G 3/8 A (BSPP)	22	20.5	50	44	12	22	80
RE 3	G 1/2 (BSPP)	G 1/2 A (BSPP)	26	24	56	52	14	27	150
RE 30	M 20x1.5	M 20x1.5	25	24	56	52	14	27	150
RE 32	M 22x1.5	M 22x1.5	27	26	56	52	14	30	150
RE 4	G 3/4 (BSPP)	G 3/4 A (BSPP)	32	30	65	60	16	36	200

4.1 Creating the mounting hole

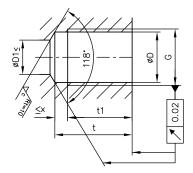

Туре	G	ØD	$\varnothing D_1$	t	t1	x
RE O	G 1/8 (BSPP)	8.7	5.5	15	13	2
RE 1	G 1/4 (BSPP)	11.8	7.5	19.5	17	2.5
RE 2	G 3/8 (BSPP)	15.3	11	21	18	3
RE 3	G 1/2 (BSPP)	19	14	23	20	3
RE 30	M 20x1.5	18.5	14	23	20	3
RE 32	M 22x1.5	20.5	15	23	20	3
RE 4	G 3/4 (BSPP)	24.5	18	26.5	23	3.5



Assembly, operation and maintenance recommendations

5.1 Intended use

This valve is intended exclusively for hydraulic applications (fluid technology).

The user must observe the safety measures and warnings in this documentation.

Essential requirements for the product to function correctly and safely:

- All information in this documentation must be observed. This applies in particular to all safety measures and warnings.
- The product must only be assembled and put into operation by qualified personnel.
- The product must only be operated within the specified technical parameters. The technical parameters are described in detail in this documentation.
- The operating and maintenance manual of the components, assemblies and the specific complete system must also always be observed.

If the product can no longer be operated safely:

- 1. Remove the product from operation and mark it accordingly.
- ✓ It is then not permitted to continue using or operating the product.

5.2 Assembly information

The product must only be installed in the complete system with standard and compliant connection components (fittings, hoses, pipes, fixtures, etc.).

The product must be shut down correctly prior to dismounting (in particular in combination with hydraulic accumulators).

🛕 DANGER

Risk to life caused by sudden movement of the hydraulic drives when dismantled incorrectly! Risk of serious injury or death.

- Depressurise the hydraulic system.
- Perform safety measures in preparation for maintenance.

5.2.1 Creating the mounting hole

See description in Chapter 4, "Dimensions".



5.3 Operating instructions

Note product configuration and pressure / flow rate

The statements and technical parameters in this documentation must be strictly observed. The instructions for the complete technical system must also always be followed.

1 NOTE

- Read the documentation carefully before usage.
- The documentation must be accessible to the operating and maintenance staff at all times.
- Keep documentation up to date after every addition or update.

Purity and filtering of the hydraulic fluid

Fine contamination can significantly impair the function of the hydraulic component. Contamination can cause irreparable damage.

Examples of fine contamination include:

- Metal chips
- Rubber particles from hoses and seals
- Dirt due to assembly and maintenance
- Mechanical debris
- Chemical ageing of the hydraulic fluid

1 NOTE

Fresh hydraulic fluid from the drum does not always have the highest degree of purity. Under some circumstances the fresh hydraulic fluid must be filtered before use.

Adhere to the cleanliness level of the hydraulic fluid in order to maintain faultless operation. (also see cleanliness level in <u>Chapter 3</u>, "Parameters").

Additionally applicable document: <u>D 5488/1</u> Oil recommendations

5.4 Maintenance information

Conduct a visual inspection at regular intervals, but at least once per year, to check if the hydraulic connections are damaged. If external leakages are found, shut down and repair the system.

Clean the device surface of dust deposits and dirt at regular intervals, but at least once per year.



Further information

Additional versions

- Restrictor check valve type BE: D 7555 B
- Check valves, type RC: D 6969 R
- Check valve type RK and RB: D 7445
- Check valve type CRK, CRB and CRH: D 7712

HAWE Hydraulik SE

Einsteinring 17 | 85609 Aschheim/Munich | Postfach 11 55 | 85605 Aschheim | Germany Tel +49 89 379100-1000 | Fax +49 89 379100-91000 | info@hawe.de | www.hawe.com